

EDGE Box2

User Manual





Effortless Efficiency Endless Possibilities

Introducing EDGE Box2 family - a compact and stylish design that challenges the norm of traditional vape products. The device comes with a button-activated function, catering to different scenarios while the large visible oil window fulfills oil-observing needs. Reoregin™ Ceramic coil is perfectly compatible with diverse types of cannabis oil especially D9, delivering the exceptional smoothest atomization experience. It can be equipped with a 1-2mL customized oil tank, allowing for maximized flexibility. The size and shape of the visible window can also be customized to fit your brand identity. With EDGE Box2, you can stand out and build user loyalty with a unique brand image. Get EDGE Box2 series, experience the ultimate in cannabis vaping.



Reoregin™ Technology
Back to the Ultimate
Freshness



BioBaleen™ Module
Reduce Spit-Back
by 99%



Vshaped™ Design
No Oil Wastage



Button Activated Function
One Press to The Fantasy




Pocket-Sized
Extremely Portable

Specifications

Dimension(mm)	75.0H * 36.5W * 13.5D
Tank Volume	1 mL / 2mL
Battery Capacity	290mAh
Output Power	High(Default): 0~2s 6.0W ; 2s~6s 5.2W ; 6s~10s 4.5W Low: 0~2s 5.2W ; 2s~6s 4.5W ; 6s~10s 3.8W
Tank Material	Food Grade PCTG
Mouthpiece Material	Food Grade PC
Central Post	Medical Grade SUS 316L Stainless Steel
Battery Material	AL6063 Aluminum Alloy
Button Activation	Start/Off: 5 Presses Voltage Settings: 3 Presses Pre-heat: 2 Presses
Ceramic Coil	Reoregin™ Ceramic Heating Coil
Charging	USB Type-C
Tip Type	Snap-In
LED Indicator	White / Yellow




Filling Instruction

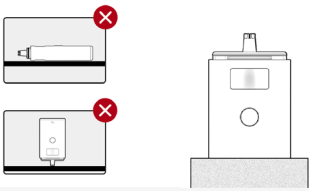


1

- Unpackage the device, and make sure it is vertically upright with the tray.

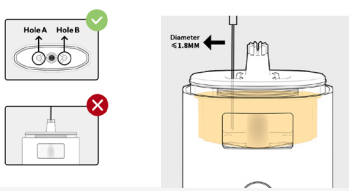


2

- Do not unplug the silicone cap when filling the oil.
- Insert the needle appropriately into filling hole A or B.
- Make sure the needle diameter is $\leq 1.8mm$.

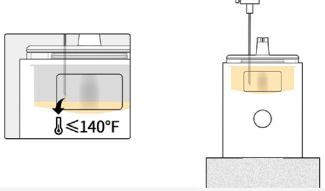


3

- The output temperature must be under $140^{\circ}F$.

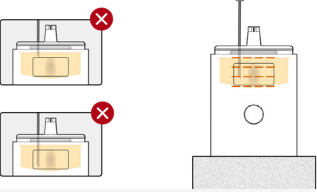


4

- The length of the needle is $2/3$ of the height of the oil tank.
- Avoid the needle touching the bottom of the oil tank.
- Avoid the central post.
- Fill in 0.95-1.0mL for a 1mL device
- 1.95mL-2.0mL for a 1mL device

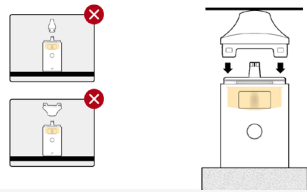


5

- When snapping in the mouthpiece, it should be vertical to the device and forced.

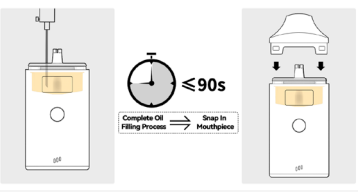


6

- Complete the snapping process within 90s after filling the oil.

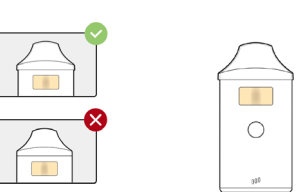


7

- Ensure the silicone cap is on the mouthpiece after completing the filling process.
- Wait 4 hours before use.

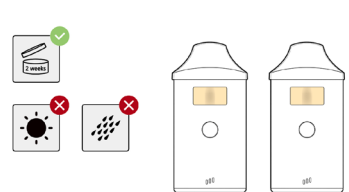





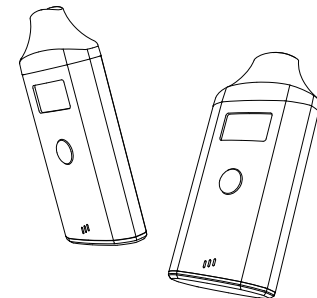


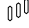









8

- Store the device in a dry, cool place that avoids sunlight.
- After unpacking the product, use it within 2 weeks for the best taste.



Operating Instructions & Other Functions




Category	Function	Instruction	The LED Indicator	Tips
Operation	Start/Off	 5 Presses in 2s	 Blinks	· The color of the light is up to the temperature mode of the last use.
	Pre-Heat	 2 Presses in 2s	 Blinks	· The mode ends when pressing the button again or it exceeds 6s
	Voltage/ Temperature Setting	 3 Presses in 2s	 High: 1 blink  Low: 1 blink	
	Inhalation	 Keep Pressing	 Breathes	· Maximum 10s · The color of the light is up to the temperature mode.
	Charging	 Plug in	 On: Charging  Off: Fully Charged  Unplugging: 3 Blinks	· You may vape during the charging.
Other Functions	Overdose Protection	 A Puff $\geq 10s$	 2 Blinks	· The device shuts down after the light blinks. · The color of the light is up to the temperature mode.
	Low Voltage Protection	 Keep Pressing	 10 Blinks	· The device shuts down after the light blinks.
	Short-Circuit Protection	 Keep Pressing	 On for 2s	· A breakdown occurs, the device shuts down after the LED indicator is off.




Cilicon Designed™




Small Investment For Big Achievement With Cannabis SMEs Solutions






Customization Options

Surface Treatment <    >

Visible Oil Tank <    >

Your Logo <    >

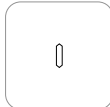LED Indicator <    >

Case Presentation




Contact Us Now to Make It Happen



Fully Customized Services



Exclusive Product

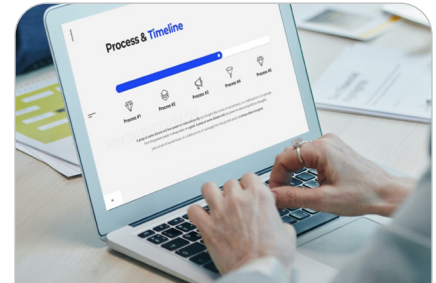

Best Cost-Effective Solution

✉ info@ciliconplus.com

🌐 [@cilicon.official](https://www.ciliconofficial.com)

🌐 www.ciliconplus.com

🐦 [@CiliconOfficial](https://twitter.com/CiliconOfficial)

📷 [@cilicon](https://www.instagram.com/cilicon)

📺 [@ciliconofficial](https://www.youtube.com/channel/UC...)



Scan with Any Browser
Explore CILICON Anytime