

ELEV Box4

User Manual





Super Endurance, Extraordinary Performance

Introducing the ELEV Box4, a revolutionary large-volume vaporizer that delivers unparalleled performance and a distinct look. With a 4mL oil capacity and Cilicon®'s iconic innovative Reoregin™ ceramic heating coil, you'll experience the natural, long-lasting flavor and enjoy an uninterrupted vaping experience. The Vshaped™ designed oil tank ensures efficient and complete consumption, minimizing waste and extending the lifespan of the device. Plus, with a variety of surface treatments and finishes available, you can create a vaporizer that's uniquely for your brand. Boost your vaping fun with the ELEV Box4 - an impressive, innovative, and customizable pocket-sized vaporizer that delivers on every level.



Reoregin™ Technology

Back to the Ultimate Freshness



Vshaped™ Design

No Oil Wastage



Button Activated Function

One Press to The Fantasy




AutoTemp™


The Right Temperature
at Anytime

Specifications

Dimension(mm)	80.0H * 43.0W * 19.0D
Tank Volume	4mL
Battery Capacity	410mAh
Output Power	High (Default): 0~2s 6.4W ; 2~6s 5.6W ; 6-10s 4.9W Low: 0~2s 5.6W ; 2~6s 4.9W ; 6-10s 4.1W
Tank Material	Food Grade PCTG
Mouthpiece Material	Food Grade PC
Central Post	SUS 304 Stainless Steel
Battery Material	AL6063 Aluminum Alloy
Button Activation	Start / Off: 5Presses; Voltage Setting: 3 Presses Pre-heat: 2 Presses
Ceramic Coil	Reoregin™ Ceramic Heating Coil
Charging	USB Type-C
Tip Type	Snap-In
LED Indicator	White

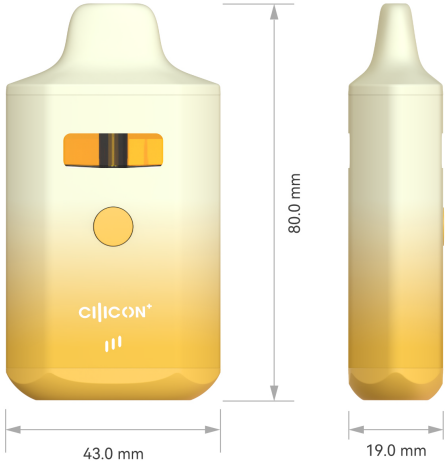


Filling Instruction

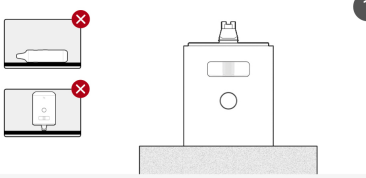


1

- Unpackage the device, and make sure it is vertically upright with the tray.

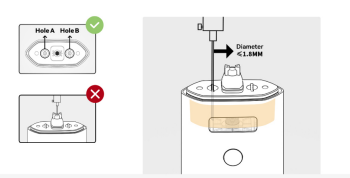


2

- Do not unplug the silicone cap when filling the oil.
- Insert the needle appropriately into filling hole A or B, avoid the central post.
- Make sure the needle diameter is $\leq 1.8mm$.

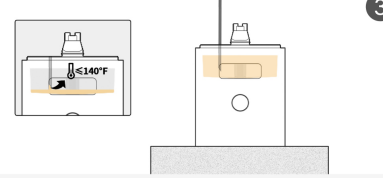


3

- The output temperature must be under $140^{\circ}F$.

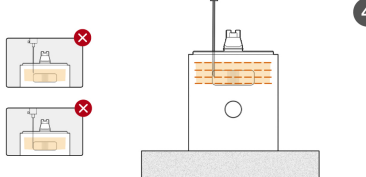


4

- The length of the needle is $2/3$ of the height of the oil tank.
- Avoid the needle touching the bottom of the oil tank.
- Fill in 3.95-4.0mL oil for this device.

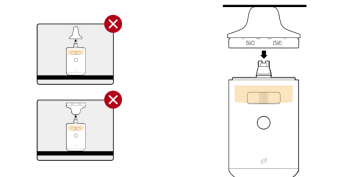


5

- When snapping in the mouthpiece, it should be vertical to the device and forced evenly.

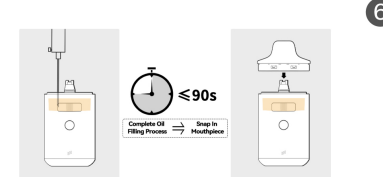


6

- Complete the snapping process within 90s after filling the oil.

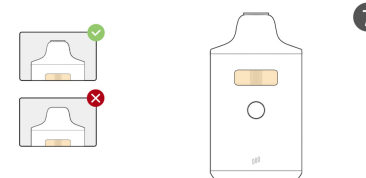


7

- Ensure the silicone cap is on the mouthpiece after completing the filling process.
- Wait 4 hours before use.

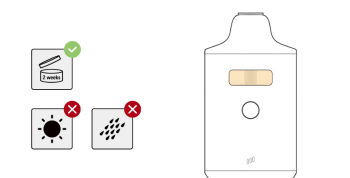





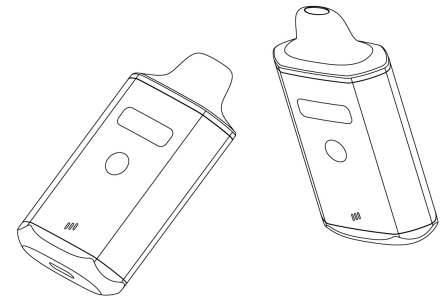















8

- Store the device in a dry, cool place that avoids sunlight.
- After unpacking the product, finish it within 2 weeks for the best taste.



Operating Instructions & Other Functions

Category	Function	Instruction	The LED Indicator	Tips
Operation	Start/Off	 5 Presses in 2s	 2 Blinks	· Temperature is up to the settings of the last use.
	Pre-Heat	 2 Presses in 2s	 On: Pre-Heating  Fade Out: Pre-Heat Stops	· The mode lasts for 6s.
	Voltage/ Temperature Setting	 3 Presses in 2s	 High: 2 blink  Low: 1 blink	
	Inhalation	 Keep Pressing	 On	· Maximum 10s.
	Charging	 Plug in	 On: Charging  Off: Fully Charged  3 Blinks: Unplugging	· You may vape during the charging. · The device starts automatically when charging.
Other Functions	Overdose Protection	 A Puff $\geq 10s \pm 1.5s$	 2 Blinks	· The device shuts down after the light blinks.
	Low Voltage Protection	 Keep Pressing	 10 Blinks	· The device shuts down after the light blinks.
	Short-Circuit Protection	 Keep Pressing	 On for 2s	· A breakdown occurs, and the device shuts down after the light is off.

Cilicon Designed™

Small Investment For Big Achievement With Cannabis SMEs Solutions



Customization Options

Surface Treatment < [blue device] [pink device] [yellow device] >

Visible Oil Tank < [white tank] [white tank] [white tank] >

Your Logo < [blue logo] [cilicon+ logo] [orange logo] >

LED Indicator < [three bars] [two bars] [one bar] >

Case Presentation



Contact Us Now to Make It Happen



Fully Customized Services



Exclusive Product



Best Cost-Effective Solution

✉ info@ciliconplus.com

🌐 www.ciliconplus.com

🌐 www.ciliconplus.com

📧 [@cilicon](https://www.ciliconplus.com)

📷 [@cilicon](https://www.ciliconplus.com)

📺 [@ciliconofficial](https://www.ciliconplus.com)



Scan with Any Browser
Explore CILICON Anytime