

GLIST 1

User Manual



Beyond Classic, Beyond Natural



Elevate your brand with the cutting-edge GLIST1 vape pen, featuring a meticulously crafted petal-like mouthpiece and Reoregin™-powered ceramic heating system, amplifying flavor restoration and boosting portability. The internationally compatible Type-C charging interface confers on-the-go ease of use. The mouthpiece facet harmonizes seamlessly with the 10% shortened polyhedron battery housing, enhancing users' experience. The exclusive mesh heating coil and BioBaleen™ Module unleash an unparalleled vaporizing experience by delivering intense potency and natural flavor with a faster and purer vaporizing process. Discover convenience, freshness, and happiness in a compact and discreet design.



Reoregin™ Technology

Back to the Ultimate Freshness



BioBaleen™ Module

Reduce Spit-Back by 99%



Vshaped™ Design

No Oil Wastage



Button Activated Function


One Press to The Fantasy

Specifications

Dimension (mm)	94.0H*22.2W*11.7D (1mL) 105.0H*22.2W*11.7D (2mL)
Tank Volume	1mL / 2mL
Battery Capacity	280mAh
Output Power	High (Default): 0~2s 6.0W ; 2~6s 5.2W ; 6~10s 4.5W Low: 0~2s 5.2W ; 2~6s 4.5W ; 6~10s 3.8W
Tank Material	Food Grade PCTG
Mouthpiece Material	Food Grade PC
Central Post	Medical Grade SUS 316L
Battery Material	AL6063 Aluminum Alloy
Button Activation	5 Presses: Start / Off 3 Presses: Voltage Settings 2 Presses: Pre-Heat
Ceramic Coil	Reoregin™ Ceramic Heating Coil
Charging	USB Type-C
Tip Type	Snap-In
LED Indicator	White / Yellow




Filling Instruction

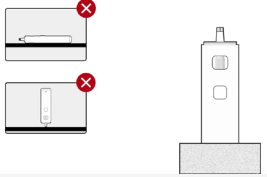


1

- Unpackage the device, and make sure it is vertically upright with the tray.

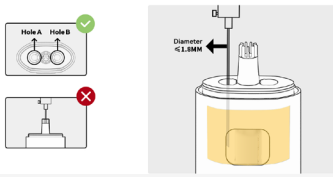


2

- Do not unplug the silicone cap when filling the oil.
- Insert the needle appropriately into filling hole A or B.
- Make sure the needle diameter is $\leq 1.8\text{mm}$.

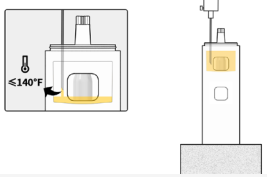


3

- The output temperature must be under 140°F .

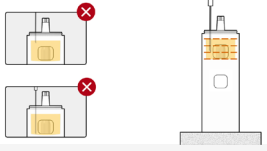


4

- The length of the needle is 2/3 of the height of the oil tank.
- Avoid the needle touching the bottom of the oil tank.
- Avoid the central post.
- Fill in 0.95–1.0mL for a 1mL device, 1.95–2.0mL for a 2mL device.

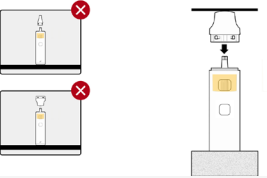


5

- When snapping in the mouthpiece, it should be vertical to the device and forced evenly.

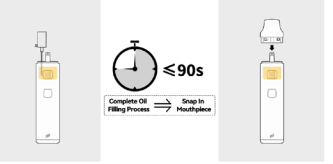


6

- Complete the snapping process within 90s after filling the oil.

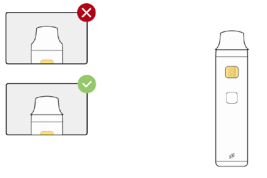


7

- Ensure the silicone cap is on the mouthpiece after completing the filling process.
- Wait 4 hours before use.

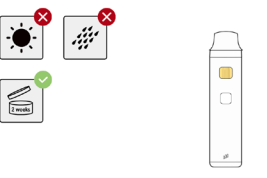





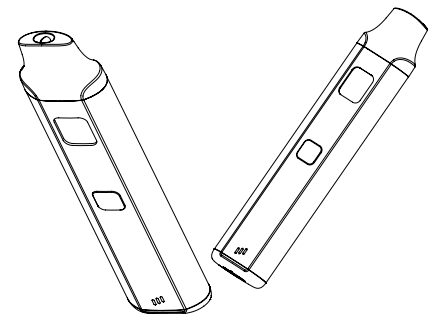













8

- Store the device in a dry, cool place that avoids sunlight.
- After unpacking the product, use it within 2 weeks for the best taste.



Operating Instructions & Other Functions




Category	Function	Instruction	The LED Indicator	Tips
Operation	Start/Off	 5 Presses in 2s	 2 Blinks	· The color of the light is up to the temperature mode of the last use.
	Pre-Heat	 2 Presses in 2s	 On	· The mode ends when pressing the button again or it exceeds 6 seconds.
	Voltage/ Temperature Setting	 3 Presses in 2s	 High: 1 Blink  Low: 1 Blink	
	Inhalation	 Keep Pressing	 Breathes	· Maximum 10 seconds, The color of the light is up to the temperature mode.
	Charging	 Plug in	 On: Charging  On: Fully Charged	· You may vape during the charging.
Other Functions	Overdose Protection	 A Puff $\geq 10s$	 2 Blinks	· The device shuts down after the light blinks. · The color of the light is up to the temperature mode.
	Low Voltage Protection	 Keep Pressing	 10 Blinks	· The device shuts down after the light blinks.
	Short-Circuit Protection	 Keep Pressing	 On for 2s	· A breakdown occurs, the device shuts down after the LED indicator is off.




Cilicon Designed™




Small Investment For Big Achievement With Cannabis SMEs Solutions






Customization Options

Surface Treatment <    >

Visible Oil Tank <    >

Your Logo <    >

LED Indicator <    >

Case Presentation




Contact Us Now to Make It Happen



Fully Customized Services



Exclusive Product

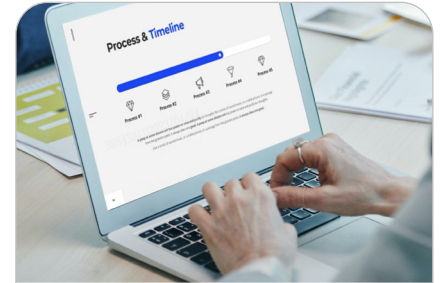

Best Cost-Effective Solution

✉ info@ciliconplus.com

🌐 www.ciliconplus.com

🌐 www.ciliconplus.com

📧 [@cilicon.official](https://www.ciliconplus.com)

📷 [@cilicon](https://www.ciliconplus.com)

📺 [@ciliconofficial](https://www.ciliconplus.com)



Scan with Any Browser
Explore CILICON Anytime