




The Cannabis Vaping Technology Foundation

GLIST Air1 Manual

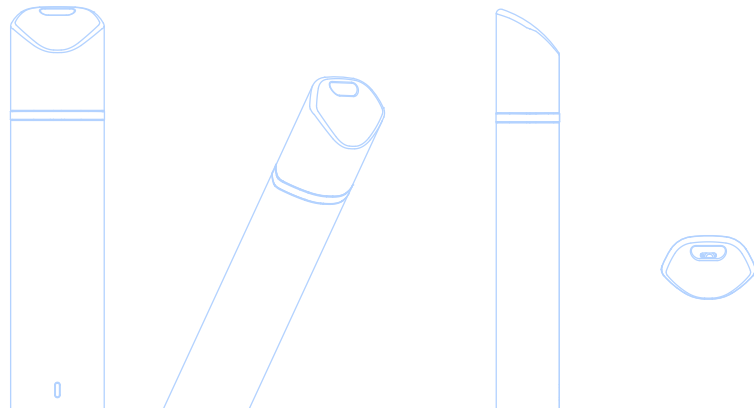

Product Overview

Posh Up for Your Portable Experience

GLIST Air1 is a posh and chic disposable vape with a 0.5mL volume. The cut design not only forms sophisticated visual beauty but is also easy to grip. The finely multi-faceted body avoids the slippage created by the portable size and makes vaping more comfortable with the rounded edge.



Specifications



Dimension :	13.91*20.59*91.56mm
Tank Volume :	0.5mL
Battery Capacity :	270mAh
Output Power :	6.08W
Resistance :	1.9Ω
Intake Hole :	2*Φ1.8mm
Tank Material :	Food Grade Plastic (PCTG)
Central Post :	316L Stainless Steel
Battery Material:	PC+ABS
Activation :	Inhale Actuated
Ceramic Core :	Formatrix™ Ceramic Heating Core
Charging :	Micro USB
Tip Type :	Snap In

Features

Posh Look


The cut design expresses the differentiated aesthetic value and shapes a chic, posh look. Furthermore, each cut face ends with a rounded edge to ensure a comfortable grip.



Features

Pocket Size


GLIST Air1 has a very simple and recognizable silhouette, reminiscent of crystal-like lines. It fits perfectly into your pocket with its portability and lightness.

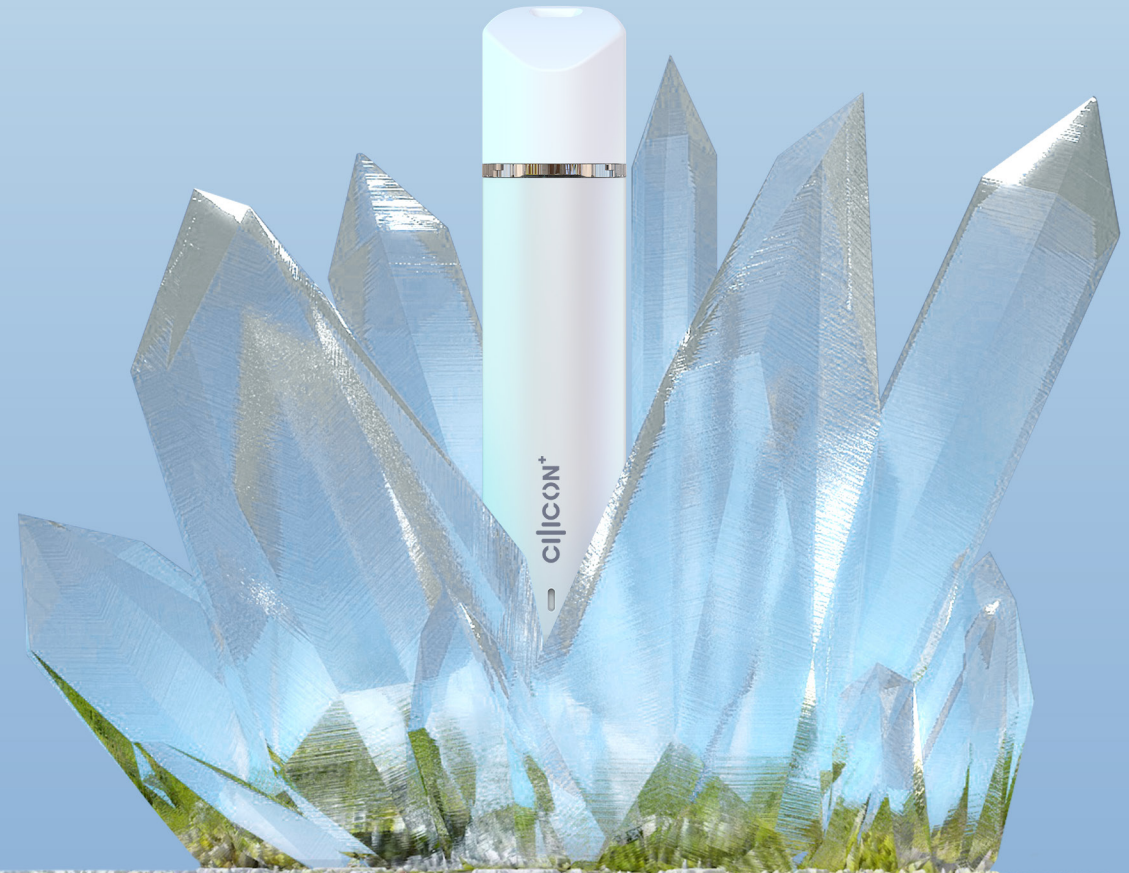

Features

Environmental Material

The device body of GLIST Air1 is made of the latest eco-friendly plastic material that is 99% recyclable, being able to support your brand's sustainability.

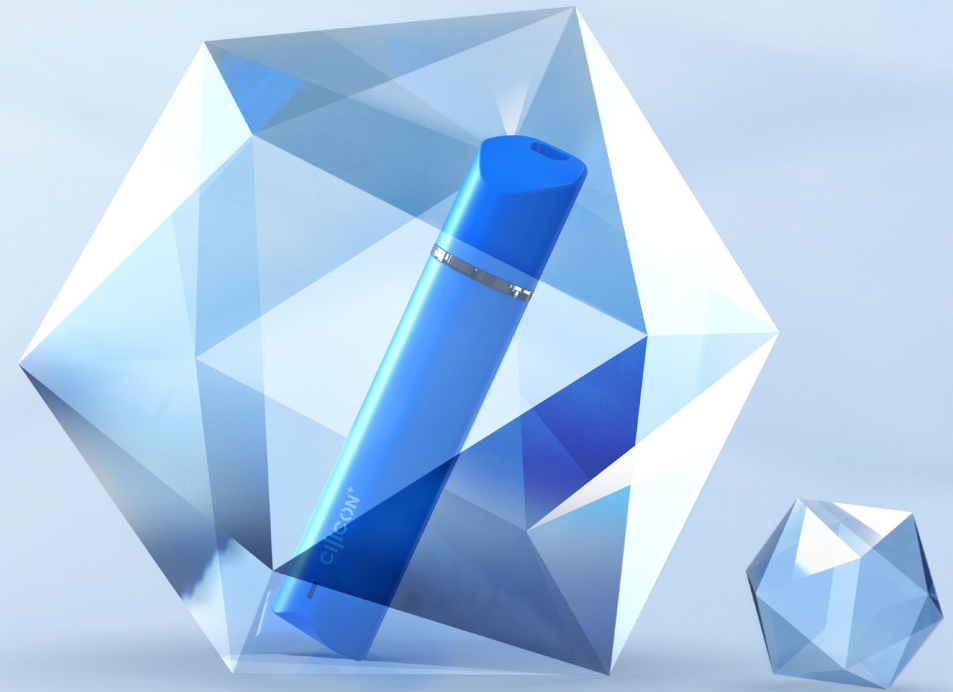


Technology

Duair™ Technology

The Expert to Solve Clogging Problem

With Duair Technology, there are two separate air channels, the primary atomizing channel and the electrical breathing-actuated channel. The primary atomizing channel is in charge of atomizing the cannabis oil. Since two of the channels are separated, the airflow will not reach the oil.

There is a possibility where one of the channels is blocked. In the other conventional vaping devices, such an issue disables the usability of the device. However, with Duair Technology, the auxiliary path will always be unobstructed. Therefore, as long as the airflow in the breathing-actuated channel can trigger the pneumatic switch, the heating wire will heat up and melts the solidified oil within the primary atomizing channel.

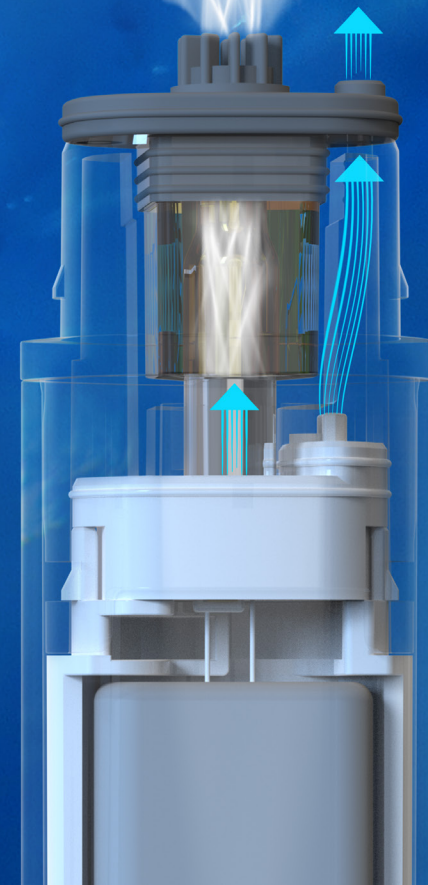


Technology

BioBaleen™ Module

Reduce Spit-Back by 99%

The key to this innovation is the soft-touched silicone brush, which can effectively absorb oil splashes during the vaping process. The BioBaleen™ cap combines the traditional cotton filter and the silicone cap to achieve the cost-effective technology and reduce the spit-back issue by 99% of all time. The technology eliminates one of the causes of oil pollution. All efforts are thus taken to maintain the visual cleanliness of the oil all the time. You won't believe how a tiny design breakthrough could make such an improvement in your daily vapor experience.

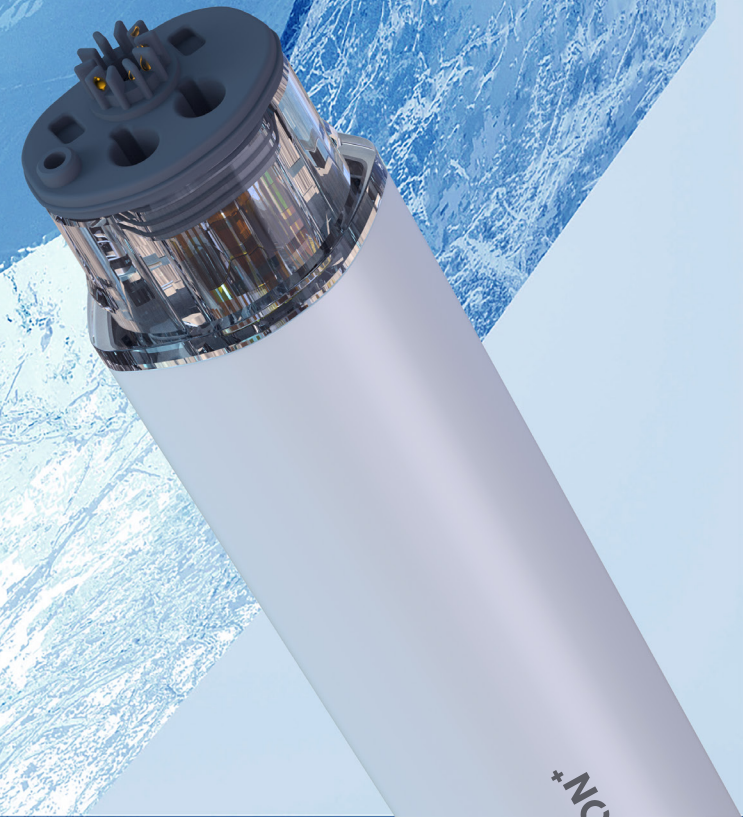

User Manual



Turn On / Off:

GLIST Air1 is a disposable with no switch-on button needed. It is ready to use after you filled with oil for 30 mins.




Inhalation:

When you start vaping, the LED indicator will gradually light up. When you stop vaping, the LED indicator will gradually fade out.



Overdose Protection:

When each inhalation exceeds 10 seconds, the LED indicator will blink twice, and the device will stop working.

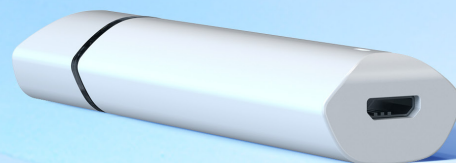

User Manual



Short-circuit Protection:

If a short circuit of the device is detected before or during vaping, the white LED indicator will light up for 2 seconds, before the device stop working.



Low Voltage Protection:


If the battery voltage gets below $< 3.1V \pm 0.2V$ before or during vaping, the white LED indicator will consecutively blink 10 times, before the device stop working.



Charging:

Charge GLIST Air1 with Micro USB
During the charging process, the white LED indicator will always be on.
When the battery is fully charged, the white LED indicator will be off.
When you unplug the charger, the LED indicator will blink 3 times.
You may vape during the charging process.

Filling Instruction

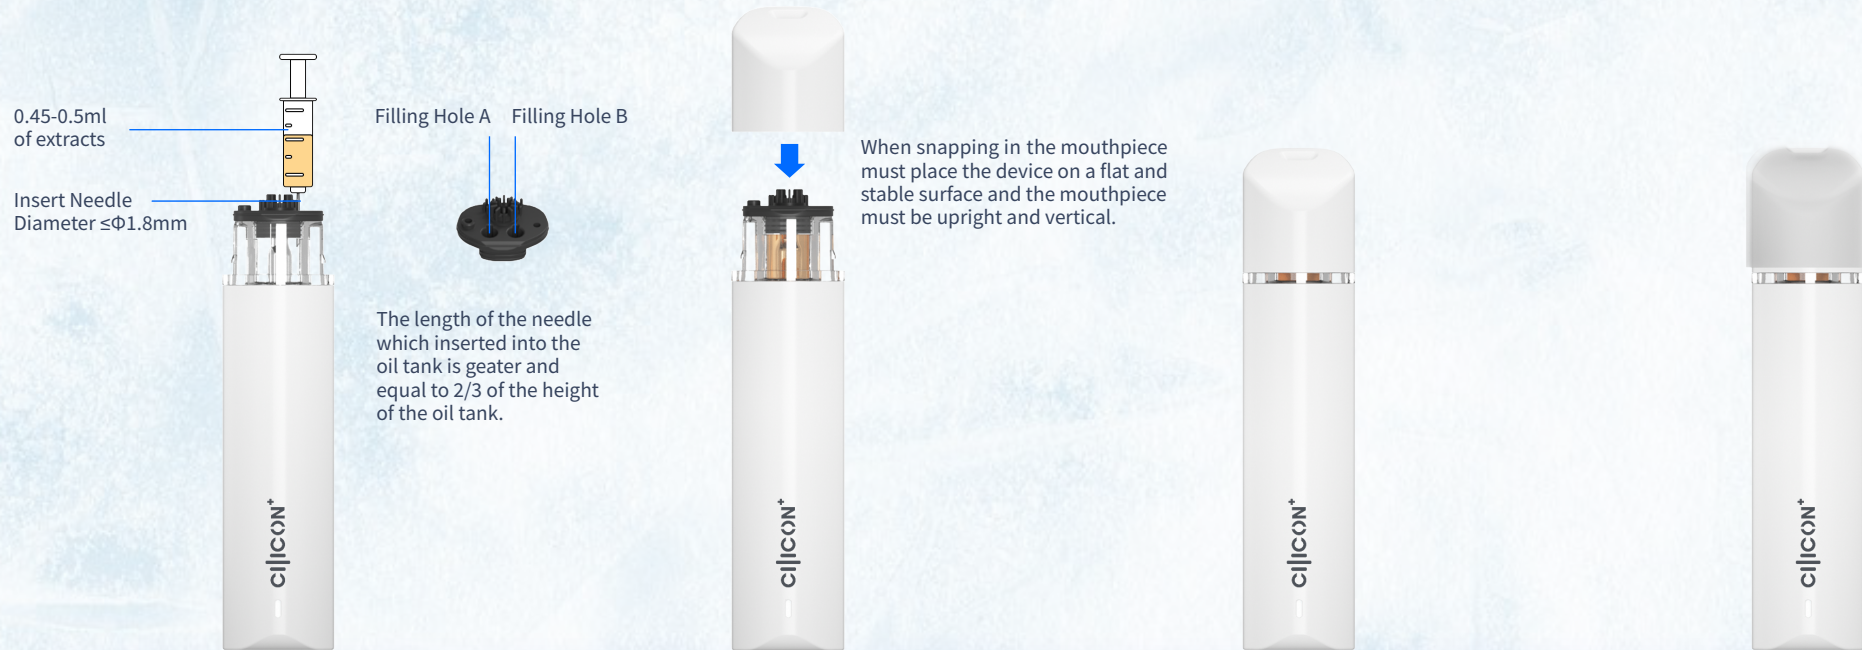

1

Insert filling needle in either Filling Hole A or B

Do not overfill or allow oil to enter the center airway.

2

Snap-in Mouthpiece

If the concentrate is as liquid as edible oil, please snap-in the mouthpiece within 90s. If the concentrate is thicker than edible oil, please snap-in the mouthpiece within 180s.

3

Finish Filling and Capping

After snapping in the mouthpiece, please may the product sit still for 4h before using.

4

Final Product

After take off the silicon rubber case, suggest to finish the oil within two weeks.



The Cannabis Vaping Technology Foundation

Thank You

GLIST Air1 Manual

