



SOLO Nano1

User Manual

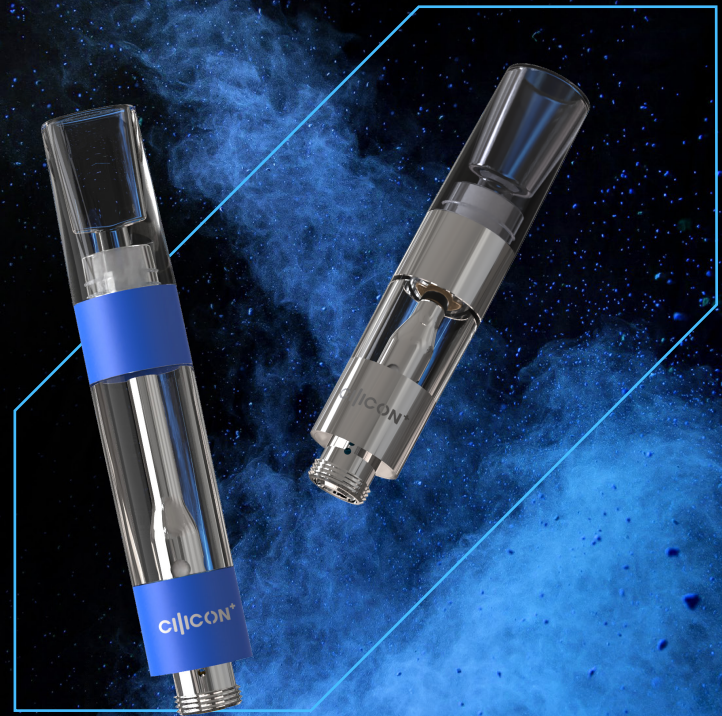

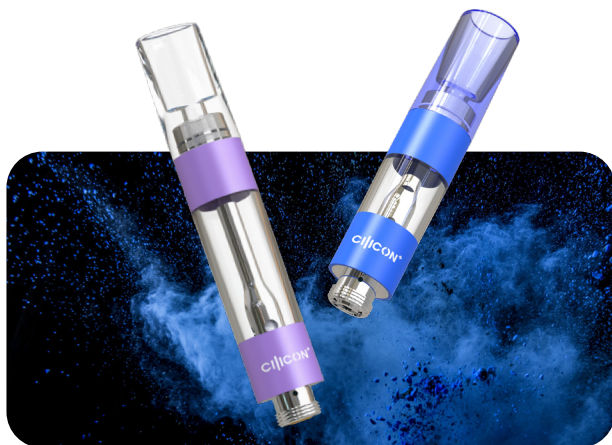

The Secret to Taste the Freshness in Every Puff

Introducing SOLO Nano1 with its revolutionary Oil Isolation® technology, designed to preserve terpene profiles to their maximum potential. Similar to a Ziploc bag, this innovative cartridge creates a relative vacuum space, preventing terpene loss and leakage, while maintaining the natural flavor like a freezer. What sets it apart is the Microfeel® technology, sintered at an extremely high temperature, eliminating impurities that can affect flavor quality. The SOLO Nano 1 boasts an impressive heating curve, delivering abundant flavor and producing massive vapor. With its innovative features, it ensures secure storage for your precious cannabis concentrates, while drawing inspiration from cosmetic bottles by incorporating a brown food-grade oil tank to shield against sunlight-induced terpene loss.



Oil Isolation™ Technology



Dual Mouthpiece Shapes



Duair® Technology



Food Grade Materials


Specifications

SOLO Nano1 User Manual

Dimension(mm)	Φ11.0*52.9(0.5mL) Φ11.0*59.1 (1mL)
Tank Volume	0.5mL / 1mL
Tank Material	Food Grade PCTG
Mouthpiece Material	Food Grade PCTG
Central Post	Medical Grade SUS 316L Stainless Steel
Ceramic Coil	Reoregin™ Ceramic Heating Coil
Tip Type	Snap-In




Filling Instruction

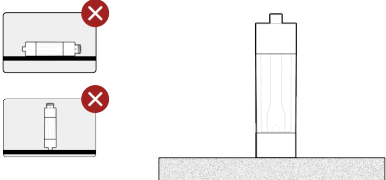


1

- Unpackage the cartridge, and make sure it is vertically upright with the tray.

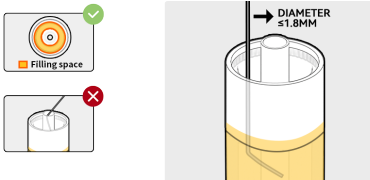


2

- Do not unplug the silicone cap when filling the oil.
- Insert the needle appropriately into filling space, and do not insert it into the central tube.
- Make sure the needle diameter is $\leq 1.8\text{mm}$.

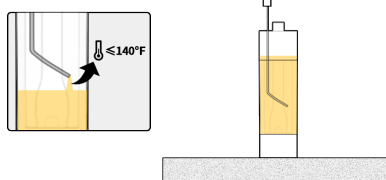


3

- The output temperature must be under 140°F .

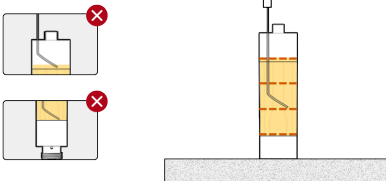


4

- The length of the needle is 2/3 of the height of the oil tank.
- Avoid the needle touching the bottom of the oil tank.
- Fill in 0.45–0.5mL/0.95–1mL for a 0.5mL/1mL cartridge.

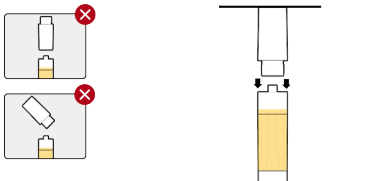


5

- When pressing in the mouthpiece, it should be vertical to the device and forced evenly.

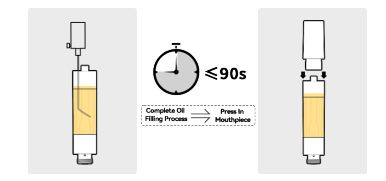


6

- Complete the pressing process within 90s after filling the oil.




7

- Ensure the silicone cap is on the mouthpiece after completing the filling process.
- Wait 4 hours before use.

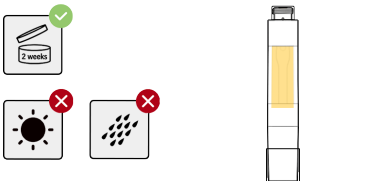

8

- Store the products upside down, in a dry, cool place that avoids sunlight.
- After unpacking the product, finish it within 2 weeks for the best taste.

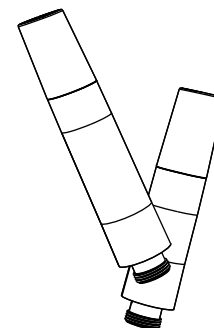

Cilicon Design

Small Investment For Big Achievement With Cannabis SMEs Solutions



SOLO Nano1

Customization Options

Surface Treatment

<

>

Mouthpiece Shape

<

>

Color

<

>

Your Logo

<

>

<

>

Contact Us Now to Make It Happen


SOLO Nano1 User Manual



Fully Customized Services



Exclusive Product

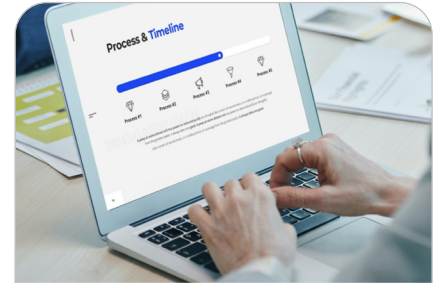

Best Cost-Effective Solution

✉ info@ciliconplus.com

🌐 www.ciliconplus.com

🌐 www.ciliconplus.com

📧 [@cilicon](https://www.ciliconplus.com)

📧 [@cilicon](https://www.ciliconplus.com)

📧 [@ciliconofficial](https://www.ciliconplus.com)



Scan with Any Browser
Explore CILICON Anytime