



# SOLO Nano2

## User Manual

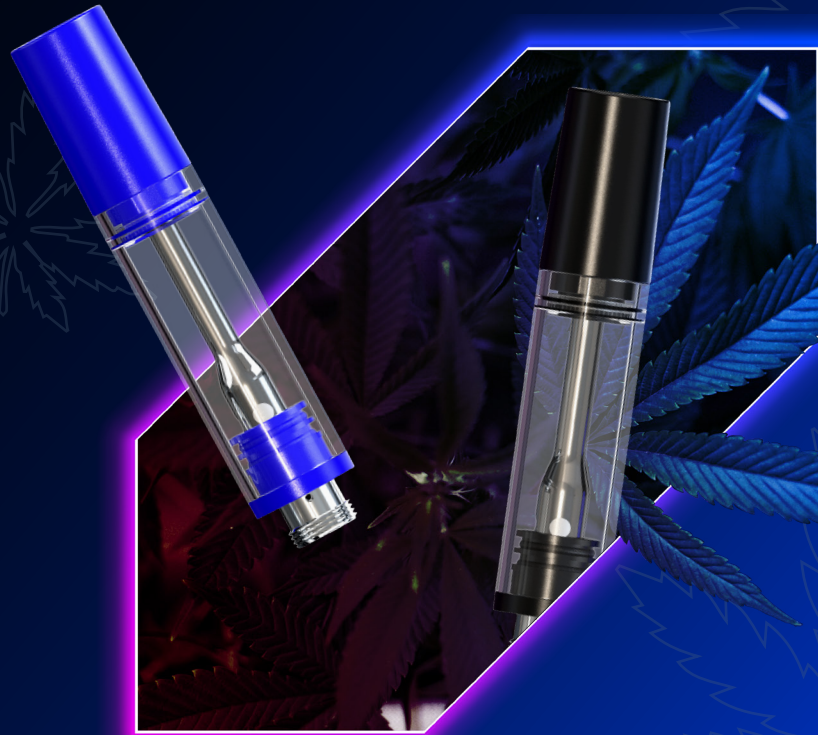

## Deliver a Value-Packed of Excellence

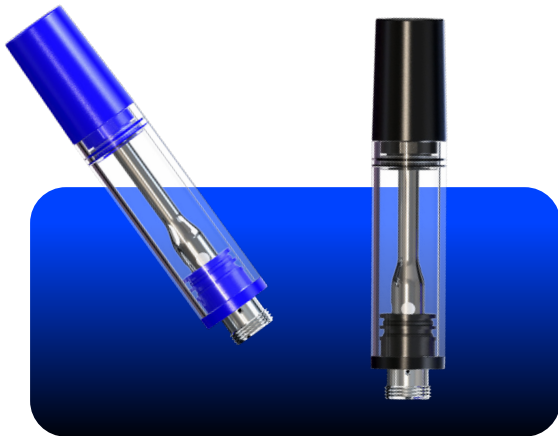

SOLO Nano2 is a compact but powerful 510 cartridge solution that offers a cost-effective option for aspiring entrepreneurs. It provides a seamless and effortless vaping experience, combining innovative technologies and features. As an ultimate vaping companion, SOLO Nano2 enhances your investment with a food-grade high-temperature resistance glass oil tank, a medical-grade heavy metal-free central post, and extensive customization options. With the advanced Formatrix® ceramic heating technology and pioneering Oil Isolation™ technology, SOLO Nano2 ensures that every drop of cannabis oil is captured and vaporized through scientifically distributed micromoles. This results in exceptionally smooth and flavorful vapor. For creators, the SOLO Nano2 offers vibrant food-grade mouthpieces and ceramic bases, allowing you to showcase your brand identity beyond just its packaging.



**510 Thread**



**Spacxfill® Technology**



**Oil Isolation™ Technology**




**Cost-Effective**


# Specifications

SOLO Nano2 User Manual

<b>Dimension(mm)</b>	Φ11.0 * 56.2
<b>Tank Volume</b>	1mL
<b>Tank Material</b>	Glass
<b>Mouthpiece Material</b>	Food Grade PCTG
<b>Central Post</b>	Medical Grade SUS 316L Stainless Steel
<b>Ceramic Coil</b>	Formatrix® Ceramic Heating Coil
<b>Tip Type</b>	Press-In

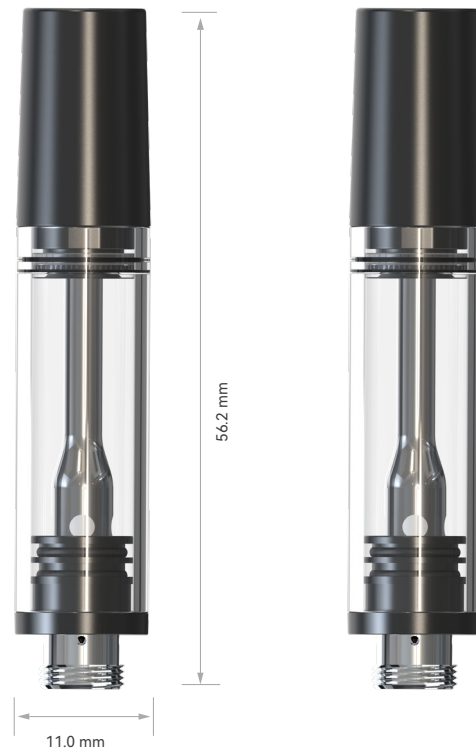


# Filling Instruction

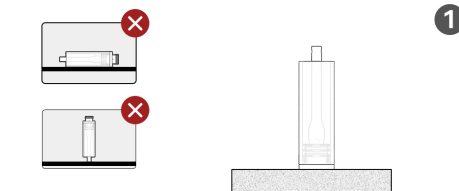


1

- Unpackage the cartridge, and make sure it is vertically upright with the tray.

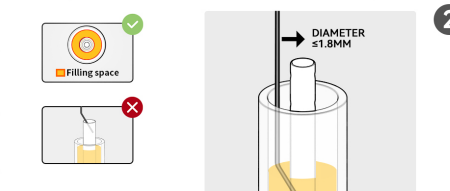


2

- Do not unplug the silicone cap when filling the oil.
- Insert the needle appropriately into filling space, and do not insert it into the central tube.
- Make sure the needle diameter is  $\leq 1.8\text{mm}$ .

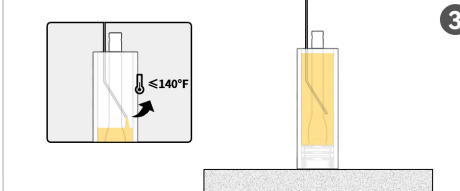


3

- The output temperature must be under 140°F.




4

- The length of the needle is 2/3 of the height of the oil tank.
- Avoid the needle touching the bottom of the oil tank.
- Fill in 0.95-1.0mL for this cartridge.

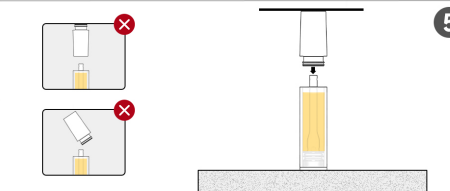


5

- When pressing in the mouthpiece, it should be vertical to the cartridge and forced evenly.

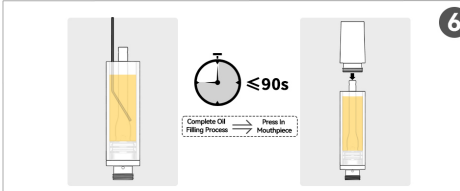


6

- Complete the pressing process within 90s after filling the oil.

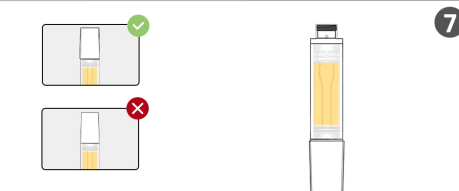


7

- Ensure the silicone cap is on the mouthpiece after completing the filling process.
- Wait 4 hours before use.

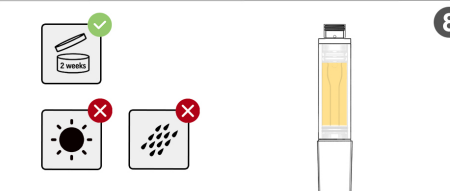

8

- Store the products upside down, in a dry, cool place that avoids sunlight.
- After unpacking the product, finish it within 2 weeks for the best taste.

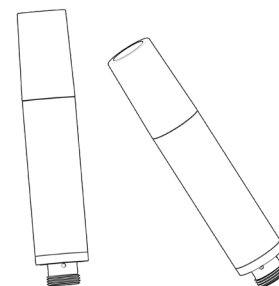

# Cilicon Design

Small Investment For Big Achievement With Cannabis SMEs Solutions

SOLO Nano2 User Manual




SOLO Nano2

## Customization Options

Surface Treatment



Mouthpiece Shape



Your Logo



## Case Presentation



# Contact Us Now to Make It Happen


SOLO Nano2 User Manual



Fully Customized Services



Exclusive Product

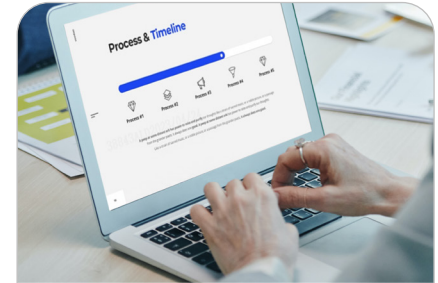

Best Cost-Effective Solution

✉ [info@ciliconplus.com](mailto:info@ciliconplus.com)

🌐 [www.ciliconplus.com](https://www.ciliconplus.com)

🌐 [www.ciliconplus.com](https://www.ciliconplus.com)

📧 [@CiliconOfficial](https://twitter.com/CiliconOfficial)

📷 [@cilicon](https://www.instagram.com/cilicon)

📺 [@ciliconofficial](https://www.youtube.com/channel/UC...)



Scan with Any Browser  
Explore CILICON Anytime